

OWNER'S MANUAL

10' Bounce-N-Splash Water Bouncer

13' Bounce-N-Splash Water Bouncer

17' Bounce-N-Splash Water Bouncer



Island Hopper®

Additional updates may be available at: www.watertrampolines.com/safety_info.asp

Contents

- 2** Introduction
- 3** Cautions, Warnings
- 5** Packing List
- 6** Inflation and Set Up
- 7** Attachments Available
- 9** Anchoring
- 9** Cleaning and Storage
- 10** Repairs and Patching
- 11** Limited Warranty

Read Before You Begin

The Operator's Manual is designed to increase your knowledge of your water bouncer and add to its enjoyment. It should also make you aware of the potentially dangerous conditions that can be found with any water sport product.

To reduce the risk of potential injury or death using this water bouncer, follow these instructions & guidelines by reading this entire manual carefully before using your *Island Hopper Bounce-N-Splash* water bouncer.



CAUTION

Watersports can be safe and fun. Be sure to read OWNERS MANUAL before use. This manual is intended to alert you to some of the potentially dangerous conditions that can arise in all watersports activities.

IT IS THE OWNERS RESPONSIBILITY TO READ THE OWNERS MANUAL AND INSTRUCT ALL USERS AS TO THE SAFE USE OF THESE PRODUCTS. BY INFLATING THE PRODUCT YOU HEREBY AGREE TO THE RELEASE OF LIABILITY, CLAIM WAIVER AND ASSUMPTION OF RISK AGREEMENT AS OUTLINED IN THE OWNER'S MANUAL.

TO REDUCE THE RISK OF INJURY OR DEATH, FOLLOW THE FOLLOWING GUIDELINES:

- Read Owner's Manual and follow the instructions.
- Instruct anyone using the product about safe guidelines before use.
- USE COMMON SENSE — DON'T ALLOW HORSEPLAY
- Check the equipment before each use. Check frame strap connections to be sure they are tight and safely secured.

THE WARNINGS SET FORTH ABOVE REPRESENT SOME COMMON RISKS ENCOUNTERED BY USERS AND DOES NOT PURPORT TO COVER ALL INSTANCES OF RISK OR DANGERS.

Please contact the dealer or manufacturer of this product if you have any questions about proper and safe use of this product.

AQUA SPORTS TECHNOLOGY
AUBURN, CA 95602 | (530) 268-7310

THESE WARNINGS ARE POSTED ON YOUR *ISLAND HOPPER*
BOUNCE-N-SPLASH WATER BOUNCER.

READ BEFORE PROCEEDING WITH SET UP.

Safety Warnings

THESE WARNINGS ARE POSTED ON YOUR *ISLAND HOPPER* BOUNCE-N-SPLASH WATER BOUNCER. READ BEFORE PROCEEDING WITH SET UP.



WARNINGS

Use of this product and participation in water sports involves inherent risks of injury or death.

1. Children should be under the supervision of an adult at all times. This product is not intended for use by children under the age of 5 years.
2. Always maintain a safe distance of 15ft (4.57m) between the product and any dock, hard object, platform, boat or pier.
3. This water trampoline is designed for use in water only. **DO NOT USE ON LAND, ON OR AROUND HARD SURFACES, OR SWIMMING POOLS.**
4. Be sure to securely anchor the water trampoline before each use. Check your jump surface connections regularly. Never use trampoline without spring pad covers properly secured.
5. All users should wear a US Coast Guard approved personal flotation device (PFD) when using this water trampoline or water bouncer.
6. The water trampoline is designed to be used in a large body of water with a **MINIMUM DEPTH OF 8 FEET**. Always check that the swimming area around the trampoline is free of obstructions including submerged logs, sandbars and rocks. Ask about local conditions before use.
7. Never use your water trampoline after sunset, or in poor lighting.
8. Avoid use around swimmers and areas that are subject to boat traffic.
9. Do not swim or play under your water trampoline.
10. Do not dive off the water trampoline, always enter the water feet first.
11. Never use in stormy weather, or in rough water conditions or high winds. Seek shelter when lightning is present or expected, **DO NOT** stay on product.
12. **NEVER USE YOUR WATER TRAMPOLINE OR WATER BOUNCER WHILE UNDER THE INFLUENCE OF ALCOHOL OR DRUGS.**
13. Be in control while using your water trampoline or water bouncer. Jump or bounce in the center of the trampoline, away from the padded frame. Do not attempt acrobatic maneuvers while using your trampoline or bouncer. Avoid bouncing too high.
14. Do not tow your water trampoline with riders aboard.
15. Always secure from unauthorized or unsupervised use while not using your product. It is best to remove the trampoline from the water and deflate or remove the jump surface and ladder to avoid unsupervised use.
16. Inspect your trampoline or bouncer and replace any worn, defective or missing parts before each use.
17. **DO NOT EXCEED THE RECOMMENDED NUMBER OF USERS FOR THIS PRODUCT.**
18. **MAXIMUM JUMPING LOAD IS 200 POUNDS. CHECK AND SECURE YOUR HARDWARE TIES WHEN JUMPING WITH MAXIMUM LOADS.**
19. Do not allow more than 3 people (300 lbs. max) to lounge on the 10' bouncer or more than 5 people (500 lbs. max) to lounge on the 13' or 17' bouncer at one time. For either product, allow only **ONE** person (200 lbs. max) to bounce on the jump surface at one time.
20. This water trampoline / bouncer should not be used as a personal flotation device.
21. Never place any body parts under the spring pad cover or frame.

Packing List

PACKING LIST

Island Hopper Bounce-N-Splash water bouncer comes as a complete set and includes the following:

 
- Bounce-N-Splash water bouncer
- Instruction manual
- Nylon carry bag
- Soft web ladder with plastic rungs
- Repair kit

	MAXIMUM LOUNGERS (SEE WARNINGS ON PAGE 4)	WEIGHT LOAD
10' Bounce-N-Splash Water Bouncer	3	300 pounds
13' Bounce-N-Splash Water Bouncer	5	500 pounds
17' Bounce-N-Splash Water Bouncer	5	1000 pounds

Inflation and Set Up


1. **Lay out the Bounce-N-Splash on a flat surface.** Make sure there are no sharp objects that could damage or cause a puncture to the water bouncer.
2. **Prior to inflation,** check the cable lock clamp which connects the wire under the water bouncer to ensure the jump surface is tight. → You may need to use a pliers and a wrench.

3. **There is a valve opening** on the water bouncer that is used to inflate the bouncer. If you have an inflation adapter, it will open the valve when inserted and close the valve when removed.

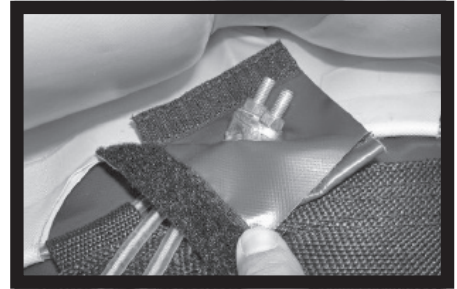

- To **open** the valve without an inflation adapter, push the spring stem down and turn **clockwise**. Inflate using a shop vacuum, foot pump or compressed air. While inflating the water bouncer, the valve stem should remain pushed in. *Photo of open valve and adapter* →

 - **Fill the tube with air until firmly inflated.** It should be hard to the touch. **This will be about 2 PSI.**

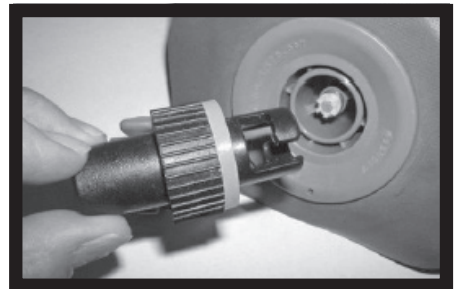

- When inflation is complete, quickly remove the inflator, **close the valve by pushing the valve stem DOWN and turn counter clockwise so IT POPS UP in the CLOSED position.** Then put on the valve cap.

- If you don't have a valve adapter you can still inflate your Bounce-N-Splash water bouncer, simply put the nozzle of your shop vacuum to the open valve and blow the air in. Once the tube is firmly inflated, pull the nozzle away and quickly close the valve.

*Air fluctuations are normal depending on outside air and water temperatures. In the cool morning, your tube may look like it is going flat due to a leak when it actually is soft due to the air temperature. **TOP OFF WITH AIR WHEN NEEDED AND KEEP TUBE FIRM WHEN IN USE.***

4. **Attach LADDER** by snapping it to the D-rings in the anchor/handle area.

Attachments Available

Gator Monster Head slide attachment
Gator Monster Tail Slide & platform attachment



Upgraded aluminum ladder



To order any of these items call (800) 893-9677,
or log on to our website: www.watertrampolines.com

Attachments Available cont.

 
Attaching Island Slide to the 10' & 13' Bounce-N-Splash



- 1. Inflate the Island Slide until firm.**
- 2. Find the two d-rings** on the side of the Bounce-N-Splash, on the far side, opposite the ladder entry.
- 3. Lay the Island Slide over the d-rings** and buckle the slide to the bouncer. Once buckled down, tie off excess strapping tightly.



Straps under Island Slide

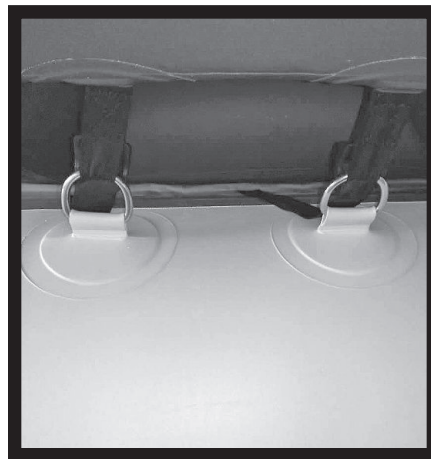

Straps connected to d-rings

To order any of these items call (800) 893-9677,
or log on to our website: www.watertrampolines.com

Anchoring



IMPORTANT NOTE

**DO NOT USE IN STRONG WINDS OR STORMS.
STAY OFF WATER BOUNCER AND
PULL TO SHORE IF YOU EXPECT A STORM**

- **IMPORTANT:** You can anchor your bouncer using any of the anchor D-rings located around the outside or inside (under) your water bouncer tube. We suggest you use marine anchors or cinder blocks as anchors or you can connect to a secured bottom mooring to tie off your water bouncer. Two ropes with 30 to 50 lb. anchors are sufficient in most conditions.
- **NOTE:** Strong winds can drag anchors. Tie off to a runaway line that runs along the lake bottom to a stake or dock on the shore.

Cleaning and Storage

1. Take Bounce-N-Splash out of the water when not in use. Lay out a clean tarp on the ground and place the tube on top of the tarp.
2. Wipe down the tube with mild soap and water then dry the tube (**DO NOT use ARMORAL or any product that contains silicone or Petroleum Distillates**) before folding. Be sure the tube is DRY before folding.
3. Remove **all the air** from float tube using a shop vacuum or power inflator. WIPE DRY to avoid mildew.
4. Wrap folded tube inside tarp and secure with rope or bungee.
5. Place the tube in the plastic container or carry bag.
6. Store product (tube, hardware and parts) in a cool, **dry place** (DO NOT store directly on concrete). Place mothballs around stored inflatable to keep mice and insects away.

Repairs and Patching

A repair kit is included. See our step by step repair guide below.

CALL TO ORDER - (800) 893-9677

- 1. FIND THE HOLE —** Inflate the tube until firm and clean with damp towel. While the tube is DRY, go over it with your hands and feel for the puncture. Often the small holes look like a scratch so check these areas first. If you find an area that you suspect is a hole, wet the area and feel for the air. Sometime you will HEAR the whistle of a small hole before you feel it. BE PATIENT. START ON THE OUTSIDE TOP AND WORK DOWN ON EACH PANEL.
- 2. CIRCLE THE HOLE WITH A PEN —** This will help you locate the area to patch once the tube is deflated.
- 3. CLEAN THE AREA —** Make sure the area around the hole is cleaned and dry. Then cut a patch that will fit over the hole allowing a few inches larger for gluing surface.
- 4. APPLY PVC GLUE AND PATCH —** You can find this adhesive at any West Marine or Hardware store under “inflatable PVC adhesive.” Place patch over hole and allow to dry for 5 minutes.
- 5. OUTLINE THE PATCH WITH AQUA SEAL (sold separately)** let stand for 24 hours. Aqua Seal dries very slowly, but the repair will be PERMANENT once it is sealed. Patches without Aqua Seal will work, but will not be permanent and eventually can come off.



LINK: www.watertrampolines.com/repair_manual.pdf

Limited Warranty

The limited warranty set forth below is given by Neoprene Distributors International Inc. **DBA: Aqua Sports Technology** with respect to the *Island Hopper* water trampoline product purchased and used in the United States and internationally.

Your *Island Hopper* product(s) when delivered to you in a new condition in the original packaging are warranted against defects in materials and workmanship for a period of one (1) year from the date of original purchase so long as the product remains in the possession of the original owner.

If you feel the product is defective, **DO NOT RETURN IT TO THE RETAILER.** Call our *Island Hopper* service representative at (530) 268-7310 to receive a return authorization. Returned units not supported by a return authorization number will be refused. Return only the defective part for inspection (tube, frame, springs, etc.) in the original carton with a copy of the bill of sale or purchase invoice along with a complete explanation of the problem and the RA number provided to you. Shipping charges, if any, must be prepaid by the consumer. COD shipments will be refused. Defective product(s) returned to Aqua Sports Technology and proven to be defective upon inspection will be repaired or exchanged for new product(s) or part(s) where applicable. The warranty period for any replacement part shall begin upon shipment, but shall in no event exceed the warranty period of the defective product. Product or parts covered by this limited warranty will be returned to you without charge.

This warranty covers all manufacturer defects encountered in normal use of the product and does not apply in the following situations:

- 1. Loss or damage to the product(s) due to abuse, mishandling, alteration, accident, failure to follow operation, maintenance or storage instructions, over inflation, under inflation, acts of God including damaged caused by storm or animals.**
- 2. If your product has the serial numbers or date of manufacture removed or altered.**
- 3. Wear and tear due to normal use and weathering.**

Neoprene Distributors International Inc. DBA: Aqua Sports Technology shall not be liable for loss of revenue or profit, failure to realize savings or other benefits, or for any other special, incidental or consequential damages caused by the use, misuse or inability to use the product(s) regardless of the legal theory on which the claim is based, even upon notification to Neoprene Distributors International Inc. DBA: Aqua Sports Technology of the possibility of such damages. Nor shall recovery of any kind against Aqua Sports Technology be greater in amount than the purchase price of the product(s) sold causing the alleged damage.

Release of Liability, Claim Waiver, and Assumption of Risk Agreement

Assumption of Risk: Use of this product involves certain inherent risks as outlined in the “Cautions” and “Warnings” section of this instruction manual and as posted on the product. When using this product, you freely agree to assume any and all risks of injury, both known and unknown, and understand that inherent risks can be reduced by abiding by the warnings listed in this manual and as post on the product.

RELEASE AND WAIVER OF CLAIMS AGREEMENT

In consideration of the sale of this product to you, you hereby agree to the fullest extent permitted by law as follows:

1. Waive any and all Claims that you have now or in the future against Neoprene Distributors International DBA Aqua Sports Technology resulting from use of this product.
2. Release Neoprene Distributors International DBA Aqua Sports Technology from any and all liability for any loss, damage, injury, or expense that you or any user of this product may suffer as a result of the use of this product, due to any cause whatsoever, including negligence on the part of Neoprene Distributors International DBA Aqua Sports Technology in the design or manufacture of this product.
3. Binding Arbitration: You agree to submit to binding arbitration on any and all claims which you believe you may have against Neoprene Distributors International DBA Aqua Sports Technology arising from the use of this product. The arbitration shall be pursuant to the rules of the American Arbitration Association and shall commence with in ONE year from the date on which any alleged claim first arose. This arbitration shall be held in Auburn California. The submission to the American Arbitration Association shall be unlimited and the arbitration award may be enforced by an Court of competent Jurisdiction.
4. Binding effect of agreement: In the event of your death or incapacity, this agreement shall be effective and binding upon your heirs, next of kin, executors, administrators, assigns, and representatives.



Aqua Sports Technology
11859 Lakeshore North | Auburn, California 95602
Warranty Information call: (530) 268-7300
askus@watertrampolines.com | www.watertrampolines.com

Additional updates may be available at: www.watertrampolines.com/safety_info.asp