

Island Hopper®

OWNER'S MANUAL

10' Bounce N Splash Water Bouncer

13' Bounce N Splash Water Bouncer

17' Bounce N Splash Water Bouncer



Additional updates may be available at: www.watertrampolines.com/safety_info.asp

Contents

- 3** Introduction
- 4** Cautions, Warnings
- 6** Packing List
- 7** Inflation and Set Up
- 8** Attachments Available
- 12** Anchoring
- 12** Cleaning and Storage
- 13** Repairs and Patching
- 14** Limited Warranty
- 15** Usage and Safety Warnings
- 16** Notice! Release of Liability, Claim Waiver,
and Assumption of Risk Agreement

Read Before You Begin

The Operator's Manual is designed to increase your knowledge of your water bouncer and add to its enjoyment. It should also make you aware of the potentially dangerous conditions that can be found with any water sport product.

To reduce the risk of potential injury or death using this water bouncer, follow these instructions & guidelines by reading this entire manual carefully before using your *Island Hopper Bounce N Splash* water bouncer.



CAUTION

Watersports can be safe and fun. Be sure to read OWNERS MANUAL before use. This manual is intended to alert you to some of the potentially dangerous conditions that can arise in all watersports activities.

IT IS THE OWNERS RESPONSIBILITY TO READ THE OWNERS MANUAL AND INSTRUCT ALL USERS AS TO THE SAFE USE OF THESE PRODUCTS. BY INFLATING THE PRODUCT YOU HEREBY AGREE TO THE RELEASE OF LIABILITY, CLAIM WAIVER AND ASSUMPTION OF RISK AGREEMENT AS OUTLINED IN THE OWNER'S MANUAL.

TO REDUCE THE RISK OF INJURY OR DEATH, FOLLOW THE FOLLOWING GUIDELINES:

- Read Owner's Manual and follow the instructions.
- Instruct anyone using the product about safe guidelines before use.
- USE COMMON SENSE — DON'T ALLOW HORSEPLAY
- Check the equipment before each use. Check frame strap connections to be sure they are tight and safely secured.

THE WARNINGS SET FORTH ABOVE REPRESENT SOME COMMON RISKS ENCOUNTERED BY USERS AND DOES NOT PURPORT TO COVER ALL INSTANCES OF RISK OR DANGERS.

Please contact the dealer or manufacturer of this product if you have any questions about proper and safe use of this product.

AQUA SPORTS TECHNOLOGY
AUBURN, CA 95602 | (530) 268-7310

THESE WARNINGS ARE POSTED ON YOUR *ISLAND HOPPER*
BOUNCE N SPLASH WATER BOUNCER.

READ BEFORE PROCEEDING WITH SET UP.

Safety Warnings

THESE WARNINGS ARE POSTED ON YOUR *ISLAND HOPPER* BOUNCE N SPLASH WATER BOUNCER. READ BEFORE PROCEEDING WITH SET UP.



WARNINGS

Use of this product and participation in water sports involves inherent risks of injury or death.

1. Children should be under the supervision of an adult at all times. This product is not intended for use by children under the age of 5 years.
2. Always maintain a safe distance of 15ft (4.57m) between the product and any dock, hard object, platform, boat or pier.
3. This water bouncer is designed for use in water only. **DO NOT USE ON LAND, ON OR AROUND HARD SURFACES, OR SWIMMING POOLS.**
4. Be sure to securely anchor the water bouncer before each use. Check your jump surface connections regularly. Never use bouncer without spring pad covers properly secured.
5. All users should wear a US Coast Guard approved personal flotation device (PFD) when using any water trampoline or water bouncer.
6. The water bouncer is designed to be used in a large body of water with a **MINIMUM DEPTH OF 8 FEET**. Always check that the swimming area around the bouncer is free of obstructions including submerged logs, sandbars and rocks. Ask about local conditions before use.
7. Never use your water bouncer after sunset, or in poor lighting.
8. Avoid use around swimmers and areas that are subject to boat traffic.
9. Do not swim or play under your water bouncer.
10. Do not dive off the water bouncer, always enter the water feet first.
11. Never use in stormy weather, or in rough water conditions or high winds. Seek shelter when lightning is present or expected, **DO NOT** stay on product.
12. **NEVER USE YOUR WATER TRAMPOLINE OR WATER BOUNCER WHILE UNDER THE INFLUENCE OF ALCOHOL OR DRUGS.**
13. Be in control while using your water trampoline or water bouncer. Jump or bounce in the center of the trampoline, away from the padded frame. Do not attempt acrobatic maneuvers while using your trampoline or bouncer. Avoid bouncing too high.
14. Do not tow your water bouncer with riders aboard.
15. Always secure from unauthorized or unsupervised use while not using your product. It is best to remove the bouncer from the water and deflate or remove the jump surface and ladder to avoid unsupervised use.
16. Inspect your bouncer or bouncer and replace any worn, defective or missing parts before each use.
17. **DO NOT EXCEED THE RECOMMENDED NUMBER OF USERS FOR THIS PRODUCT.**
18. **MAXIMUM JUMPING LOAD IS 200 POUNDS. CHECK AND SECURE YOUR HARDWARE TIES WHEN JUMPING WITH MAXIMUM LOADS.**
19. Do not allow more than 3 people (300 lbs. max) to lounge on the 10' bouncer or more than 5 people (500 lbs. max) to lounge on the 13' or 17' bouncer at one time. For either product, allow only **ONE** person (200 lbs. max) to bounce on the jump surface at one time.
20. This water bouncer should not be used as a personal flotation device.
21. Never place any body parts under the spring pad cover or frame.

Packing List

PACKING LIST

Island Hopper Bounce N Splash water bouncer comes as a complete set and includes the following:

- Bounce N Splash water bouncer
- Instruction manual
- Nylon carry bag
- Soft web ladder with plastic rungs
- Repair patches

 
	MAXIMUM LOUNGERS (SEE WARNINGS ON PAGE 4)	WEIGHT LOAD
10' Bounce N Splash Water Bouncer	3	300 pounds
13' Bounce N Splash Water Bouncer	5	500 pounds
17' Bounce N Splash Water Bouncer	5	1000 pounds

Inflation and Set Up

1. **Lay out the Bounce N Splash on a flat surface.** Make sure there are no sharp objects that could damage or cause a puncture to the water bouncer.
2. **Prior to inflation,** check the cable lock clamp which connects the wire under the water bouncer to ensure the jump surface is tight. Most of the time you don't need to do anything to this prior to use because it comes tightened to the manufacturer's suggested tension.



3. **Locate the Valve.** To Open the valve, push the spring stem down and turn counter clockwise and the spring will stay down and the valve will remain open. Inflate using any type of air blowing device such as a shop vac, leaf blower, or foot pump. Blowers can be found on our website. Take a picture of this QR with your smart phone to find that web page quickly.

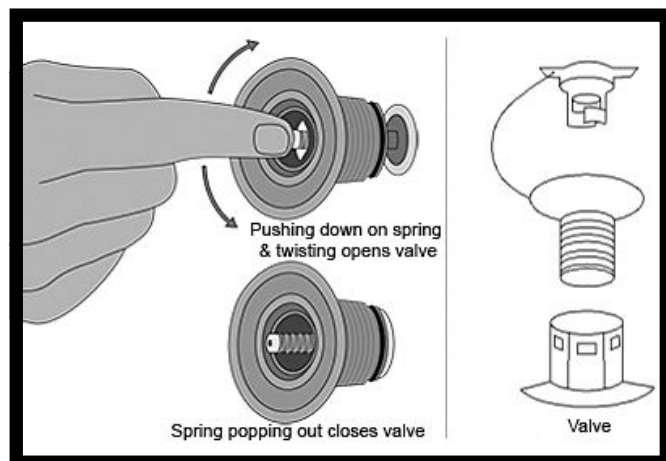

- **Fill the tube with air until firmly inflated.** It should be hard to the touch. **This will be about 2 PSI.**
- When inflation is complete, quickly remove the inflator, **close the valve by pushing the valve stem down and turning clockwise so it pops out.** Then put on the valve cap.
- If you don't have a valve adapter you can still inflate your Bounce N Splash water bouncer, simply put the nozzle of your shop vacuum or any power inflator to the open valve and blow the air in. Once the tube is firmly inflated, pull the nozzle away and quickly close the valve, needle spring popped up. **To top of and make your product firm, take inflator nozzle and butt it back up to the closed valve and force air in. This will allow a little air to get in and top off product without letting the air escape.**

*Air fluctuations are normal depending on outside air and water temperatures. In the cool morning, your tube may look like it is going flat due to a leak when it actually is soft due to the air temperature. **TOP OFF WITH AIR WHEN NEEDED AND KEEP TUBE FIRM WHEN IN USE.***

4. **Attach LADDER** by snapping it to the D-rings in the anchor/handle area.

Visit our website for helpful videos on inflation:
watertrampolines.com/valveuse/
watertrampolines.com/product-informational-videos/

Attachments Available

Gator Monster Head slide attachment
Gator Monster Tail Slide & platform attachment



Upgraded aluminum ladder



To order any of these items call (800) 893-9677, log on to our website: www.watertrampolines.com, or use your smart phone's camera, and TAP open the browser link that appears.

Attachments Available cont.

 
Attaching Island Slide to the 10' & 13' Bounce N Splash



- 1. Inflate the Island Slide until firm.**
- 2. Find the two d-rings** on the side of the Bounce N Splash, on the far side, opposite the ladder entry.
- 3. Lay the Island Slide over the d-rings** and buckle the slide to the bouncer. Once buckled down, tie off excess strapping tightly.



Straps under Island Slide

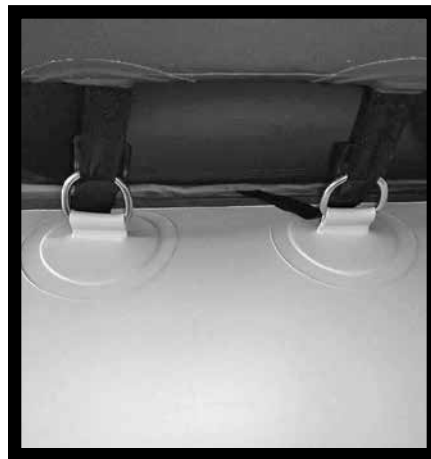

Straps connected to d-rings

 
To order any of these items call (800) 893-9677, log on to our website: www.watertrampolines.com, or use your smart phone's camera, and TAP open the browser link that appears.



Attachments Available cont.

Attaching Bounce N Slide to Bounce N Splash

1. **Find 2 yellow D-rings** on exterior water bouncer section. Find the two d-rings on the side of the Bounce N Splash, on the far side, opposite the ladder entry.
2. **Two options:** A. Attach using lower d-rings on Bounce N Slide to create more of a sliding angle. B. Attach using upper d-rings on Bounce N Slide to create less of a sliding angle.
3. **Place Bounce N Slide on section** and secure bottom 2 D-rings on Slide to Water Bouncer using the bungee cord. Extra bungees are in the box just in case. All bungees are not always needed.

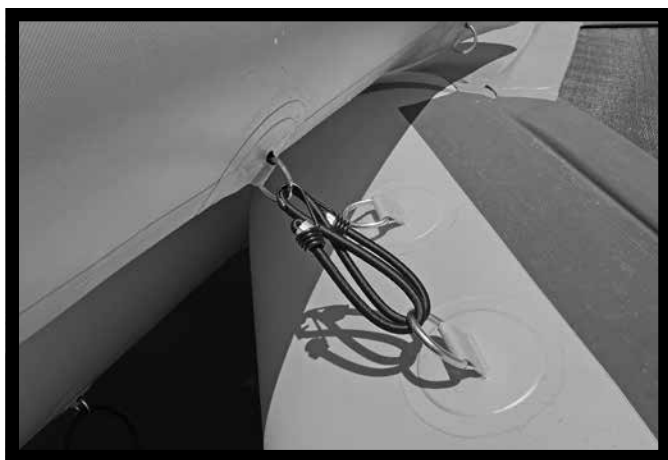

Purchase
attachments
here!



 
How-to
install
video here!

To order any of these items call (800) 893-9677, log on to our website: www.watertrampolines.com, or use your smart phone's camera, and TAP open the browser link that appears.

Attachments Available cont.

Attaching Island Runner to Bounce N Splash

- 1. Find a any corner** of the Bounce N Splash to add the Island Runner. The Island Runner is a float alone product and does not require you to attach it to the bouncer. You can simply tie it off to a D-ring or handle and let it float.
- 2. Take strap in Island Runner box** and run it through the d-rings on Island Runner end. Then run it up over the tube and through hole in Bounce N Splash mat and completely around the water bouncer tube.
- 3. Buckle down** and tie off excess strap.

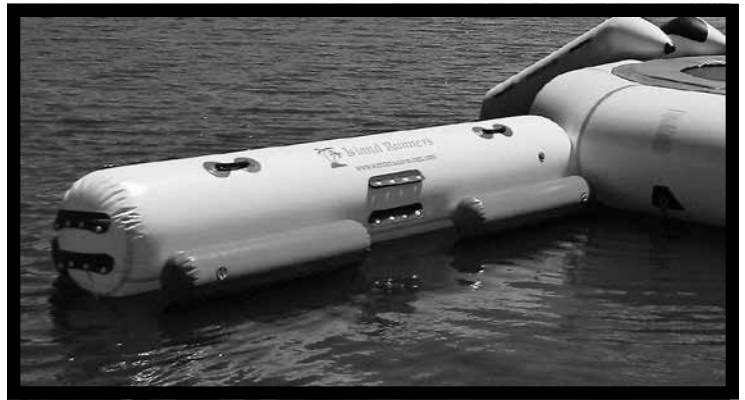

To order any of these items call (800) 893-9677, log on to our website: www.watertrampolines.com, or use your smart phone's camera, and TAP open the browser link that appears.



Anchoring



IMPORTANT NOTE

**DO NOT USE IN STRONG WINDS OR STORMS.
STAY OFF WATER BOUNCER AND
PULL TO SHORE IF YOU EXPECT A STORM**

- **IMPORTANT:** You can anchor your bouncer using any of the anchor D-rings located around the outside or inside (under) your water bouncer tube. We suggest you use marine anchors or cinder blocks as anchors or you can connect to a secured bottom mooring to tie off your water bouncer. Two ropes with 30 to 50 lb. anchors are sufficient in most conditions.
- **NOTE:** Strong winds can drag anchors. Tie off to a runaway line that runs along the lake bottom to a stake or dock on the shore.

Cleaning and Storage

1. Take Bounce N Splash out of the water when not in use. Lay out a clean tarp on the ground and place the tube on top of the tarp.
2. Wipe down the tube with mild soap and water then dry the tube (**DO NOT** use *ARMORAL* or any product that contains silicone or Petroleum Distillates) before folding. Be sure the tube is DRY before folding.
3. Remove **all the air** from float tube using a shop vacuum or power inflator. WIPE DRY to avoid mildew.
4. Wrap folded tube inside tarp and secure with rope or bungee.
5. Place the tube in the plastic container or carry bag.
6. Store product (tube, hardware and parts) in a cool, **dry place** (DO NOT store directly on concrete). Place mothballs around stored inflatable to keep mice and insects away.

Repairs and Patching

A repair kit is included. See our step by step repair guide below.

CALL TO ORDER - (800) 893-9677

- 1. FIND THE HOLE —** Inflate the tube until firm and clean with damp towel. While the tube is DRY, go over it with your hands and feel for the puncture. Often the small holes look like a scratch so check these areas first. If you find an area that you suspect is a hole, wet the area and feel for the air. Sometime you will HEAR the whistle of a small hole before you feel it. BE PATIENT. START ON THE OUTSIDE TOP AND WORK DOWN ON EACH PANEL.
- 1A. Find Quick-Fix-Patches** that were included with the product. Once you find the hole, deflate, and use these patches to repair small holes. For larger holes and more permanent repairs see below.
- 2. CIRCLE THE HOLE WITH A PEN AND THEN DEFLATE —** This will help you locate the area to patch once the tube is deflated.
- 3. CLEAN THE AREA —** Make sure the area around the hole is cleaned and dry. Then cut a patch that will fit over the hole allowing a few inches larger for gluing surface.
- 4. APPLY PVC GLUE AND PATCH —** You can find this adhesive at any West Marine or Hardware store under “inflatable PVC adhesive.” Place patch over hole and allow to dry for 15 minutes.
- 5. OUTLINE THE PATCH WITH AQUA SEAL** (sold separately) let stand for 24 hours. Aqua Seal dries very slowly, but the repair will be PERMANENT once it is sealed. Patches without Aqua Seal will work, but will not be permanent and eventually can come off.



Using your smart phone's camera, TAP open the browser link that appears. This will take you to the Island Hopper inflation and repairs webpage.

Workmanship Limited Warranty

5 Year “No Seam Blow Out” Limited Warranty

The limited warranty set forth below is given by Neoprene Distributors International Inc. **DBA: Aqua Sports Technology** with respect to the *Island Hopper* water bouncer product purchased and used in the United States and internationally.

Your *Island Hopper*® product(s) when delivered to you in new condition in the original packaging are covered for manufacturing related defects in materials and workmanship. Warranty is valid from the date of original purchase so long as the product remains in the possession of the original owner. Proof of purchase is required.

Warranty Includes:

- Seams and welded connection points are covered against separation for a period of 5 years.
- Accessories supplied by Island Hopper (jump pad, jump surface, ladder, cable, inflators supplied) are warranted for a period of 1 year.

If you feel the product is defective, **DO NOT RETURN IT TO THE RETAILER.** Call our *Island Hopper* service representative at (530) 268-7310 to receive a return authorization. Returned units not supported by a return authorization number will be refused. Return only the defective part for inspection (tube, frame, springs, etc.) in the original carton with a copy of the bill of sale or purchase invoice along with a complete explanation of the problem and the RA number provided to you. Shipping charges, if any, must be prepaid by the consumer. COD shipments will be refused. Defective product(s) returned to Aqua Sports Technology and proven to be defective upon inspection will be repaired or exchanged for new product(s) or part(s) where applicable. The warranty period for any replacement part shall begin upon shipment, but shall in no event exceed the warranty period of the defective product. Product or parts covered by this limited warranty will be returned to you without charge.

This warranty covers all manufacturer defects encountered in normal use of the product and does not apply in the following situations:

- 1. This warranty does not cover any damage to the Island Hopper because of punctures, tearing, ripping, abrasion, ordinary wear and tear, abuse, and negligence.**
- 2. Loss or damage to the product(s) due to abuse, mishandling, alteration, accident, failure to follow operation, maintenance or storage instructions, over inflation, under inflation, acts of God including damaged caused by storm or animals.**
- 3. Handles and D-rings are not covered under warranty.**

 
Neoprene Distributors International Inc. DBA: Aqua Sports Technology shall not be liable for loss of revenue or profit, failure to realize savings or other benefits, or for any other special, incidental or consequential damages caused by the use, misuse or inability to use the product(s) regardless of the legal theory on which the claim is based, even upon notification to Neoprene Distributors International Inc. DBA: Aqua Sports Technology of the possibility of such damages. Nor shall recovery of any kind against Aqua Sports Technology be greater in amount than the purchase price of the product(s) sold causing the alleged damage.




Max. users:
5/8




Device
requires
balancing

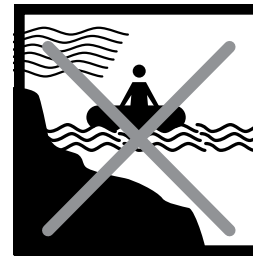

 
Do not
use when
there are
offshore
currents

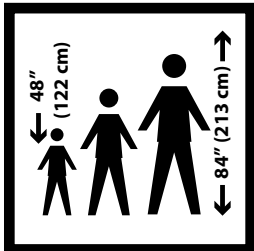


Size range

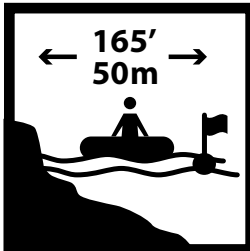 


Ensure safe
distance

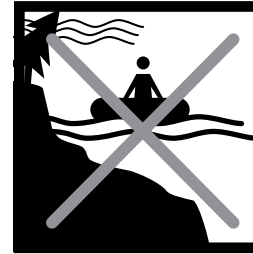 

 
Do not
use when
there are
offshore
winds

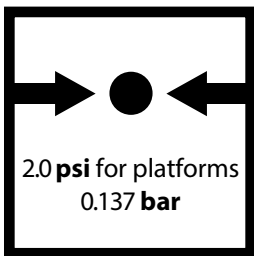

 
Working
pressure:
2.0 psi
(0.137 bar)
for platforms

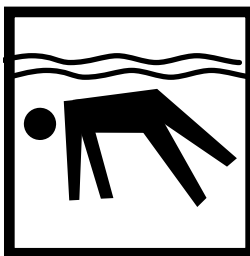

No protection
against
drowning

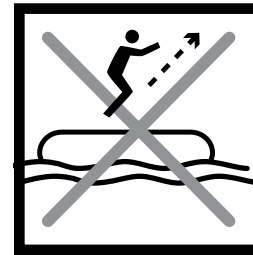 


DO NOT
launch people
from the
product

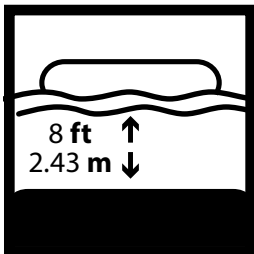 


Minimum
water depth
8 ft
(2.43 m)



 Swimmers
only

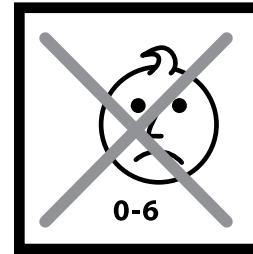


Only for
children
above
6 years old

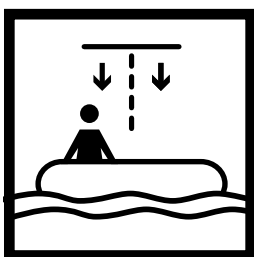 


Device
provides
floating
stability



 Read
owner's
manual

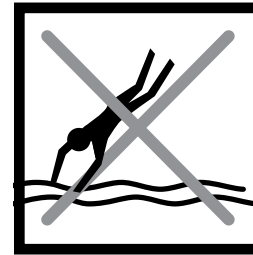


No diving

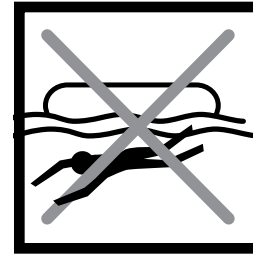 


Do not swim
under the
product



 Always wear a
life jacket

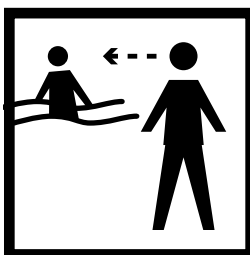

Always
supervise
children

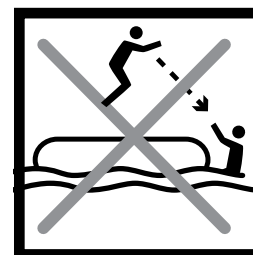 

Do not jump
if water is
not clear



NOTICE! RELEASE OF LIABILITY, CLAIM WAIVER, AND ASSUMPTION OF RISK AGREEMENT

By opening and assembling Island Hopper® Bounce N Splash water bouncer you are agreeing (1) to be bound to the terms set forth below and (2) to require anyone using this product to be bound by such terms. If you are unwilling to be bound by these terms, return this product (before use) for a full refund.

ASSUMPTION OF RISK: Use of this product and any of its components involves certain inherent risks, dangers, and hazards which can result in serious personal injury and death. In using the product, you freely agree to assume and accept any and all known and unknown risks of injury while using this equipment. The risks inherent in the sport can be greatly reduced by abiding by the warning guidelines listed in this owner's manual and by using common sense.

RELEASE AND WAIVER OF CLAIMS AGREEMENT: In consideration of the sale of the product to you, you hereby agree to the fullest extent permitted by law as follows:

TO WAIVE ANY AND ALL CLAIMS: that you have or may in the future have against Neoprene Distributors International: DBA Aqua Sports Technology, its distributors and dealers, resulting from use of this product and any of its components.

TO RELEASE: Neoprene Distributors International: DBA Aqua Sports Technology from any and all liability for any loss, damage, injury, or expense that you or any users of this product may suffer, or that your next of kin may suffer, as a result of the use of this product, due to any cause whatsoever, including negligence or breach of contract on the part of Neoprene Distributors International: DBA Aqua Sports Technology in the design or manufacture of this product and any of its components.

ARBITRATION: In further consideration of the sale of this product to you and any of its components, you hereby agree to submit to binding arbitration any and all claims which you believe you may have against Neoprene Distributors International: DBA Aqua Sports Technology arising from the use of any Neoprene Distributors International: DBA Aqua Sports Technology equipment or products. The arbitration shall be pursuant to the rules of the American Arbitration Association. Arbitration shall be commenced within (1) year from the date on which any alleged claim first arose. Further, the arbitration shall be held in Auburn, CA unless otherwise mutually agreed to by all parties. The submission to the American Arbitration Association shall be unlimited and the arbitration award may be enforced by any Court of competent jurisdiction.

BINDING EFFECT OF AGREEMENT: In the event of your death or incapacity, this agreement shall be effective and binding upon your heirs, next of kin, executors, administrators, assigns, and representatives.

ENTIRE AGREEMENT: In entering into this agreement, you are not relying upon any oral or written representations other than what is set forth in this agreement and the Neoprene Distributors International: DBA Aqua Sports Technology owner's manual.



Aqua Sports Technology
11859 Lakeshore North | Auburn, California 95602
Warranty Information call: (530) 268-7300
askus@watertrampolines.com | www.watertrampolines.com

Additional updates may be available at: www.watertrampolines.com/safety_info.asp